



Si necesita servicios de traducción gratuitos para comprender los procesos escolares, llame al (919) 852-3303

إذا كنت بحاجة إلى خدمات الترجمة المجانية للتعرف على سير العمليات بالمدرسة، اتصل بالرقم (919) 852-3303

Si vous avez besoin de services de traduction gratuits pour comprendre les procédures scolaires, appelez le (919) 852-3303

यदि आपको विद्यालय की प्रक्रियाओं को समझने के लिए निःशुल्क अनुवाद सेवाएं चाहिए, तो (919) 852-3303 पर कॉल करें

학교/교육 과정에 관한 무료 번역 서비스가 필요하시면 다음 번호로 연락하여 주십시오 (919) 852-3303

Nếu quý vị cần sự thông dịch miễn phí để hiểu phương pháp trường học, xin vui lòng gọi số điện thoại (919) 852-3303

如果您需要免费翻译服务来了解学校流程，请致电 (919) 852-3303

 
Updating the operating system for your Chromebook can resolve many common issues and also ensures the Chromebook has the latest features.

**NOTE:** If a device is more than one version behind, it will need to be restarted more than once to complete the update.

1. Open **Chrome browser**.




2. In upper-right corner of window, click the **3 dots** OR if available, click **Update** button.

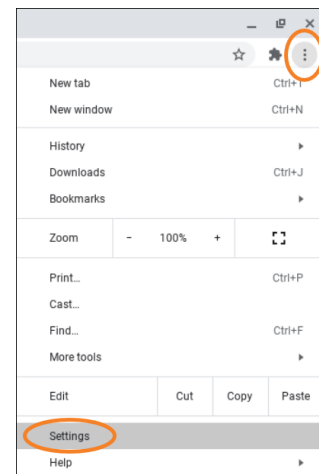


3. Click **Settings**.

4. On lower-right, click **About Chrome**.

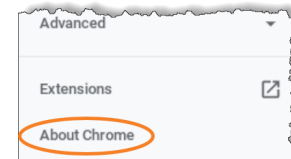

5. Click **Check for Updates** OR click **Chrome OS Settings**.

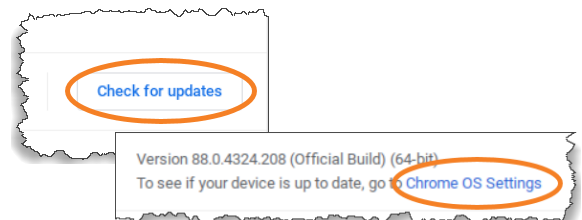

6. Update will download. When finished downloading, click **Restart**.

- Repeat steps above until the **Check for Updates** button disappears.

If this does not resolve the issue, contact the WCPSS Help Desk at 919-664-5700.